


### Main Branch Fusing Diagram and Table (IFPA-208-3P-24A)

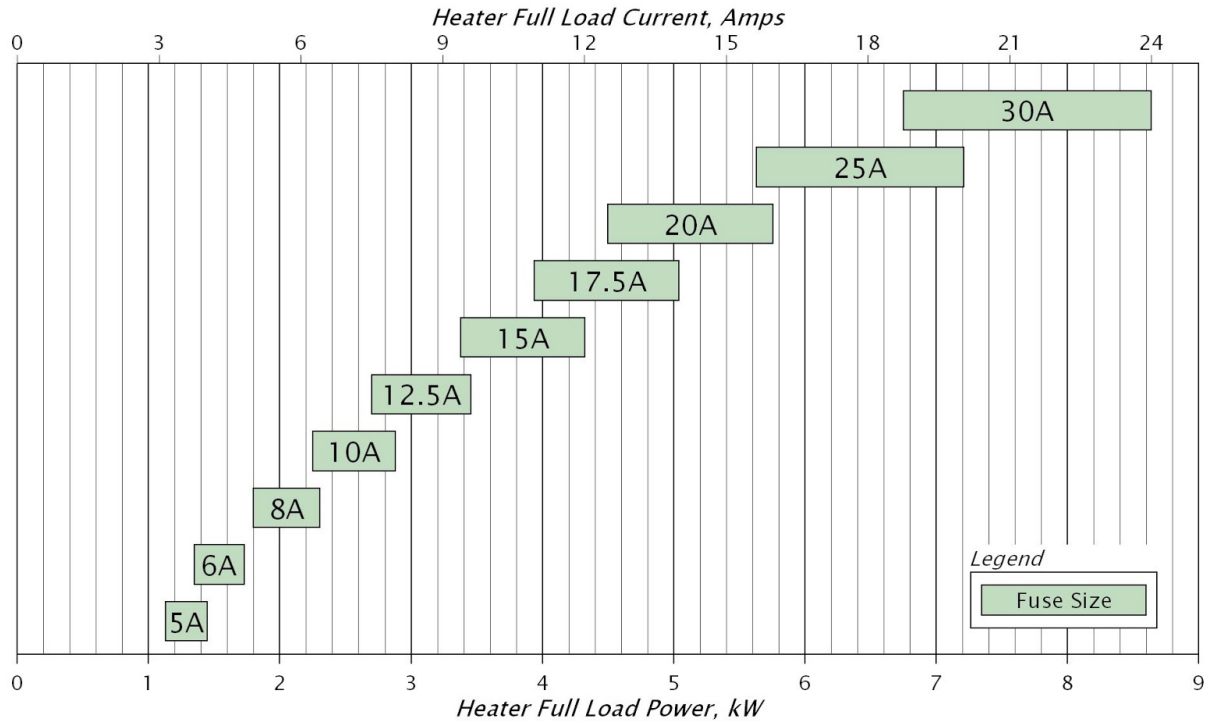

		Fuse Size									
		5A	6A	8A	10A	12A	15A	17.5A	20A	25A	30A
Power, kW	Min	1.13	1.35	1.80	2.25	2.70	3.38	3.94	4.50	5.63	6.75
	Max	1.44	1.73	2.31	2.88	3.46	4.32	5.04	5.76	7.21	8.65
FLA, Amps	Min	3.13	3.75	5.00	6.25	7.50	9.38	10.9	12.5	15.6	18.8
	Max	4.00	4.80	6.40	8.00	9.60	12.0	14.0	16.0	20.0	24.0