


Main Branch Fusing Diagram and Table (IFPA-240-1P-35A)

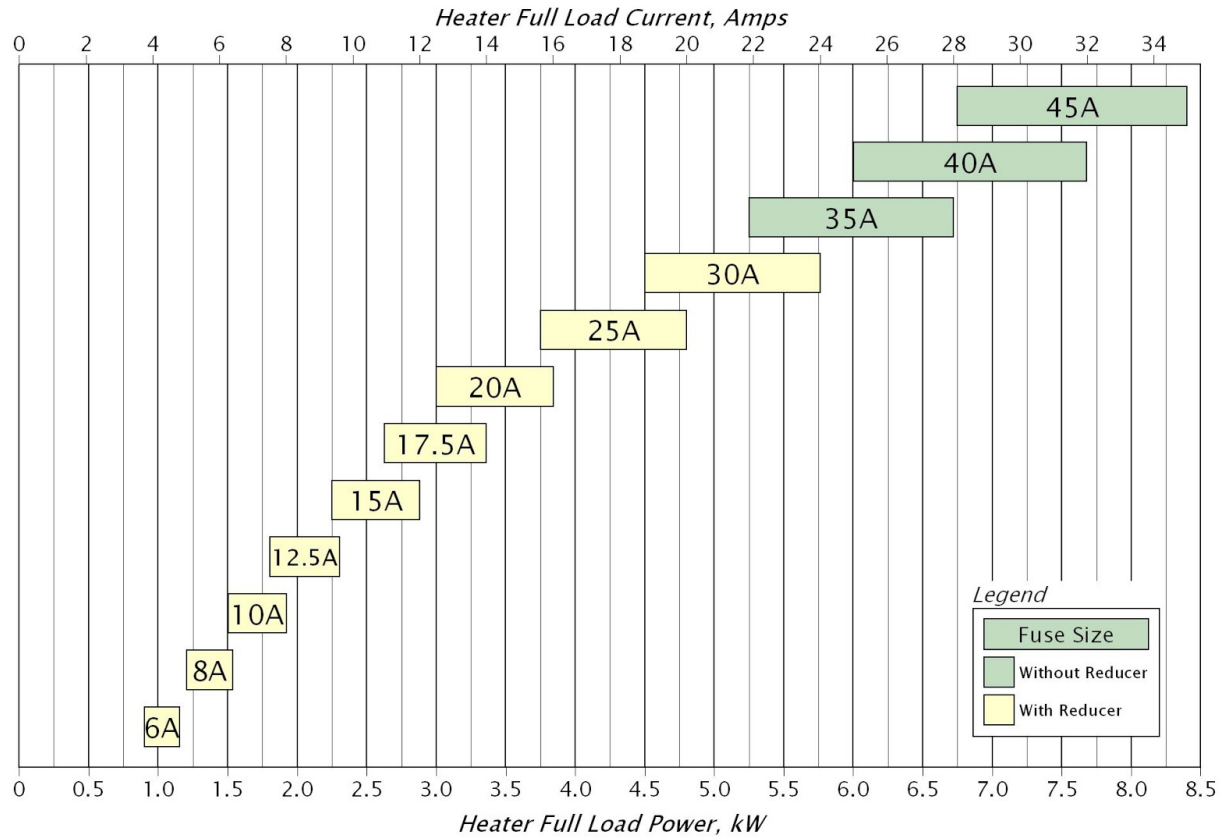

		Fuse Size												
		Littlefuse® LRUJ63 Fuse Reducers Required for 1-30A Fuses											No Fuse Reducers	
		5A	6A	8A	10A	12A	15A	17.5A	20A	25A	30A	35A	40A	45A
Power, kW	Min	0.75	0.90	1.20	1.50	1.80	2.25	2.63	3.00	3.75	4.50	5.25	6.00	6.75
	Max	0.96	1.15	1.54	1.92	2.30	2.88	3.36	3.84	4.80	5.76	6.72	7.68	8.40
FLA, Amps	Min	3.13	3.75	5.00	6.25	7.50	9.38	10.9	12.5	15.6	18.8	21.9	25.0	28.1
	Max	4.00	4.80	6.40	8.00	9.60	12.0	14.0	16.0	20.0	24.0	28.0	32.0	35.0